




New Style Pulley

Replacement Instructions for Quasar

Instructions



1 In the "New Pulley" service package you will get the following items: (4) replacement pulleys, (2) bushings and (2) replacement belts

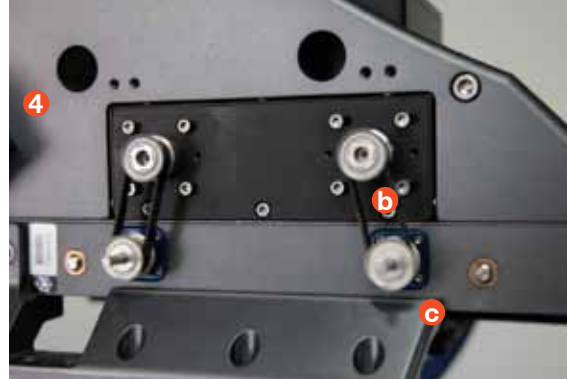

4 Using a 1/16" allen key, loosen the pulley set screws from the motor box (b). Using a .050" allen key, loosen set screws on moco plate pulleys (c).



2 Using a .050" allen key, remove the moco plate knobs.



5 Once all pulleys are loose, pull both pulleys at the same time to remove pulleys and belt.




3 Using a 7/16" allen key, remove the pulley covers. Loosen all eight screws around top pulleys (a).



6 Check lead screw shafts (d). If there are any burrs, remove them by using fine sandpaper.



Slide supplied bushing onto the lead screw shaft.

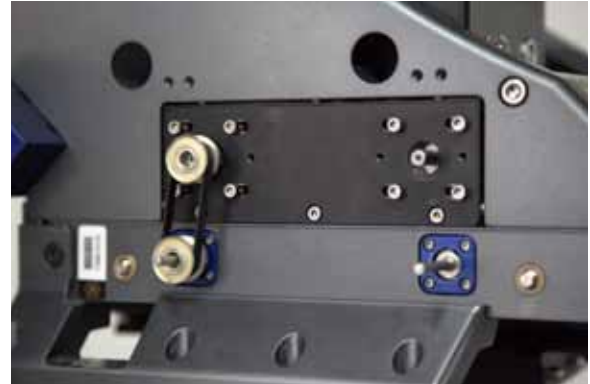

Be sure both pulleys are now tight using the 1.5mm allen key. Note: flat on top shaft is no longer position crucial.




Slide new pulley over bushing. Be sure the rig side of the pulley is flush with the bushing and tighten using a 1.5mm allen key.



Slide top pulley to the center of the motor box. Apply slight pressure and lock down the retainer bolts. Belt should have a slight give.



Slide top pulley and belt over lower pulley and push top pulley towards the rig.

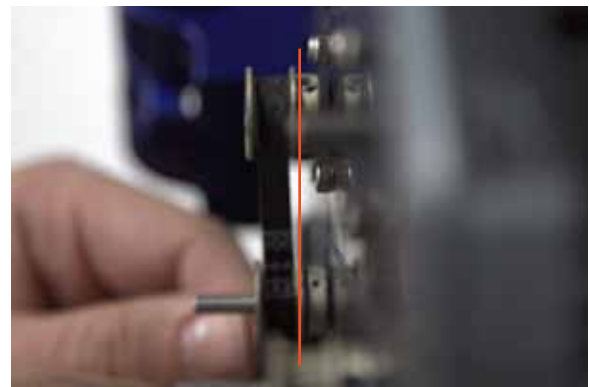

Be sure profile of belt is in a straight line. Once completed, button everything back up.